


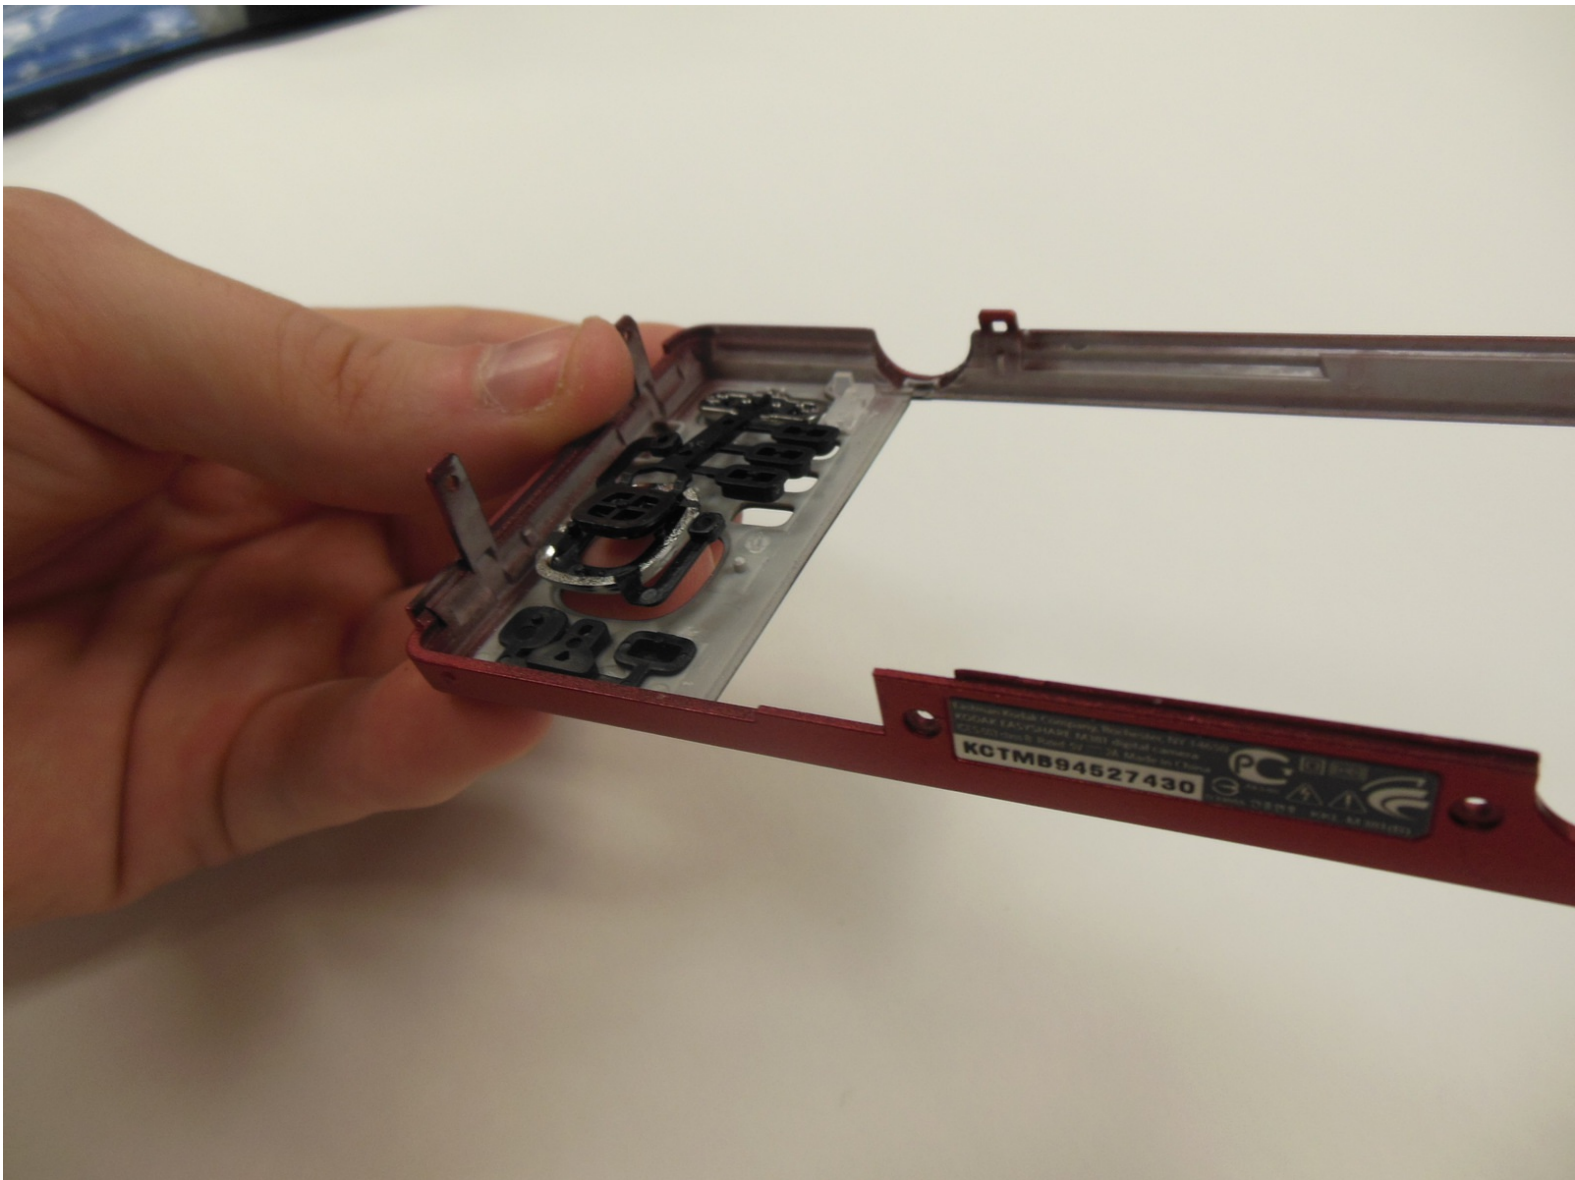

Kodak EasyShare M381 Button Replacement

Use this guide if the buttons to your camera start sticking or lose connection.

Written By: Christina Hamby



INTRODUCTION

Removal and replacement of the buttons can be simple and easy. You can also use this guide for simply cleaning your camera buttons if they have a weak connection.



TOOLS:

- [Magnetic Project Mat](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Soft Cloth](#) (1)
-

Step 1 — Battery



- First, press in and slide forward the battery latch as indicated by the arrow.

Step 2




- Press down on battery until you hear a click and release it. Battery should easily slide out.

Step 3 — Back Panel Frame




- Obtain screwdriver, and remove the 3.85 mm frame screws as highlighted.
- ⓘ Using a magnetized surface to keep from losing screws may be very helpful.

Step 4

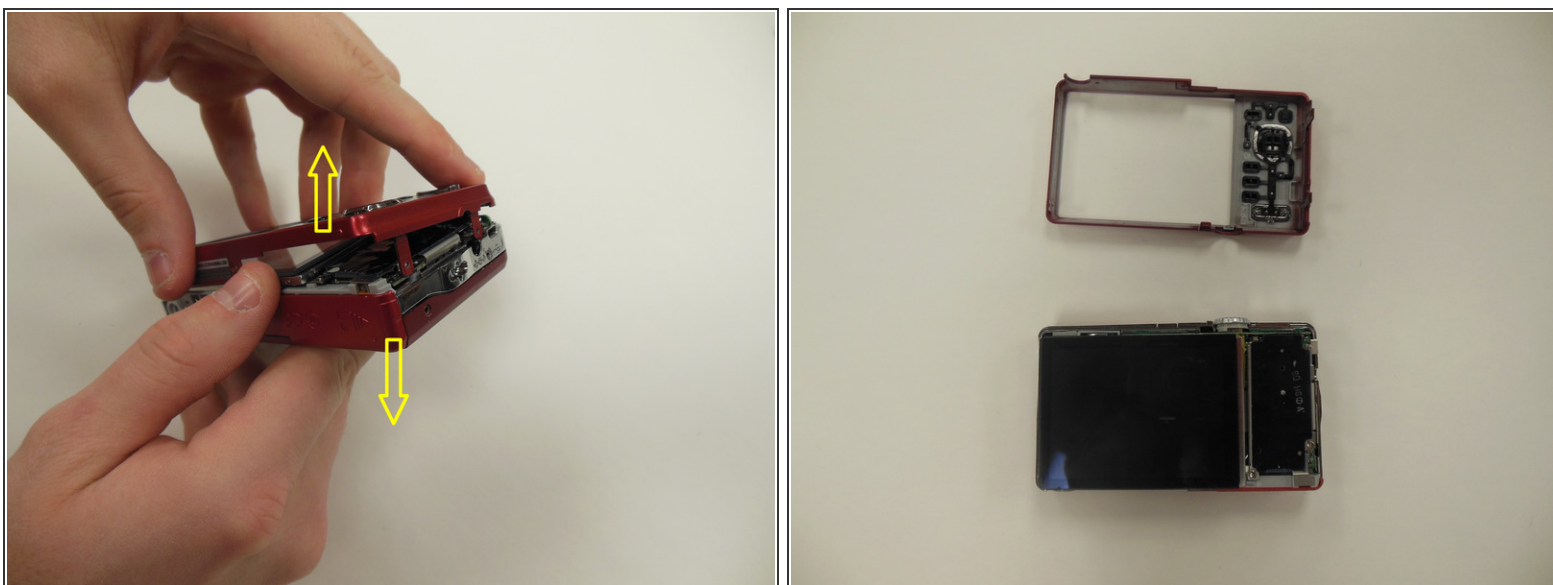


- After screws are removed, using both hands, carefully pull the frame apart from the camera as indicated.

Step 5 — Button

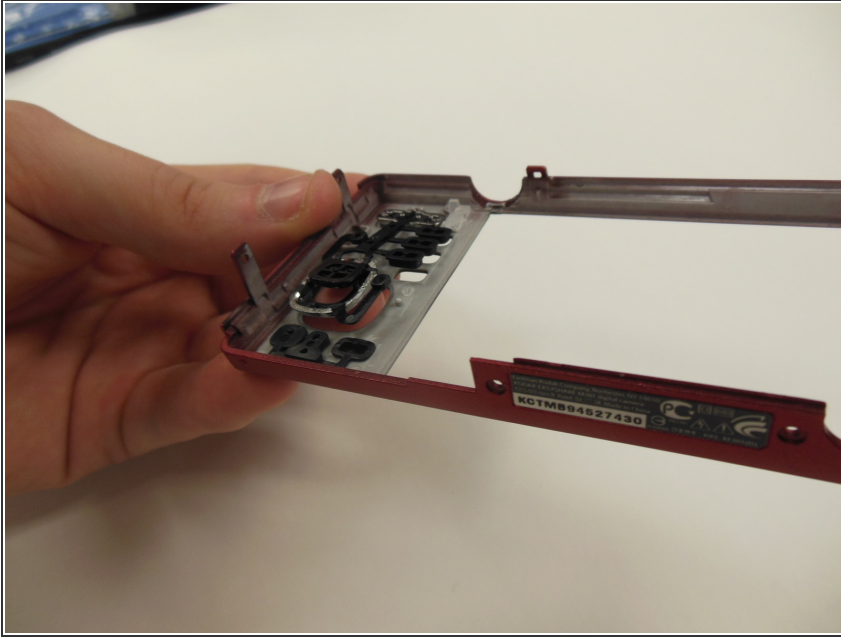

- Carefully pick up frame and push upward on buttons.

Step 6

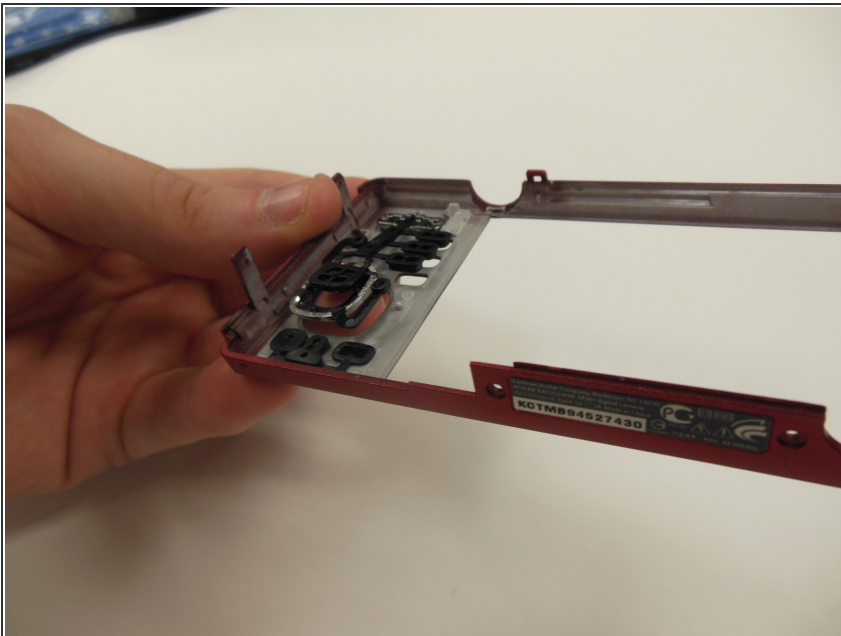

- Clean and replace as needed.
- ⓘ A microfiber cloth, or any other type of electronic cloth may be used to clean them if desire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 05:05:27 AM.